



Laundry Service Graphics

(Decals, Labels, Signs, Overlays)

Produced By: **Airmark Co.**
17110 Jersey Ave.
Artesia, CA 90701

Contacts: **Marlene Bañuelos -- Office Manager**
PH: (562) 403-3010
FX: (562) 403-3013
EM: mbanuelos@calplate.com

Cesar Chavez -- Production Manager
PH: (562) 403-3010
FX: (562) 403-3013
EM: cesar@calplate.com

Miscellaneous Decals

NOTE: All decals shown are for concept only. Decals can be modified in any way you need (size, wording, appearance, etc.)

**CLEAN LINT SCREEN INSIDE
DOOR BEFORE USING**

CREDIT CARDS ONLY

**INSERT
75¢**

**INSERT
\$1.50**

**INSERT
\$3.00**

**This
machine
accepts \$5's
\$10's and
\$20's ONLY.**

FOR ADDITIONAL
DRY TIME,
INSERT CARD OR COIN
BEFORE END OF CYCLE

PARA TIEMPO ADICIONAL
INSERTA TARJETA O MONEDA
ANTES DEL TERMINO DE CICLO

**LEAVE CARD IN SLOT
UNTIL DISPLAY READS
"REMOVE CARD"**

**DEJE LA TARJETA
INSERTADA HASTA QUE
EL INDICADOR LEA
"REMOVE CARD"**

 
 
MACHINE NUMBER:

1


MACHINE NUMBER:

17

DO NOT OPEN after adding soap
NO ABRE despues de echar jabon

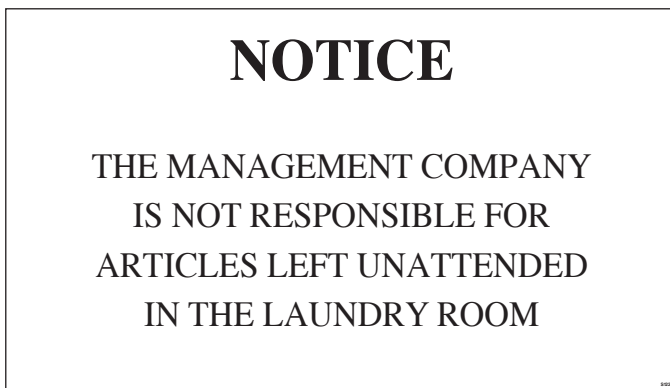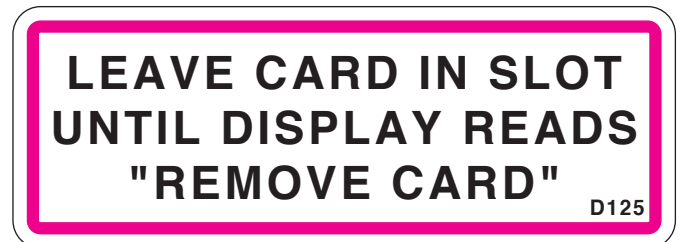

NO COINS!
SMART CARDS ONLY

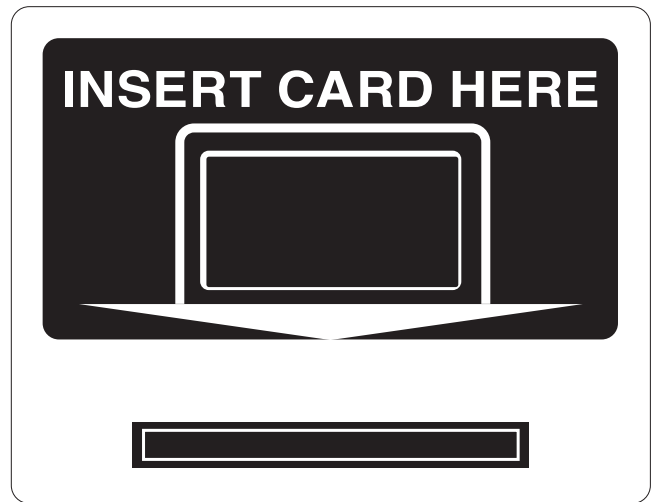 

OPERATING INSTRUCTIONS

IMPORTANT: CLEAN LINT FILTER BEFORE EACH LOAD


- | | |
|--|---|
| 1. OPEN DRYER DOOR, LOAD CLOTHES, CLOSE DOOR. | 5. TO STOP DRYING CYCLE-OPEN DOOR. |
| 2. SELECT "FABRIC TEMPERATURES". | 6. TO RESTART DRYER-CLOSE DOOR AND REPEAT STEP 4. |
| 3. INSERT COINS OR CARD AS REQUIRED.
USE ADDITIONAL COINS OR CARD FOR MORE DRYING TIME. | 7. WHEN DISPLAY INDICATES "00" TIME REMAINING OR PANEL LIGHT GOES OUT, REMOVE CLOTHES FROM DRYER. |
| 4. PUSH "START" PAD OR BUTTON. | |
- IF CLOTHES ARE NOT DRY AS DESIRED, REPEAT STEPS 3 AND 4.

8FS

**FOR ADDITIONAL
DRY TIME,
INSERT COIN BEFORE
END OF CYCLE
\$.25 FOR 10 MINUTES**

**PARA TIEMPO ADICIONAL
INSERTA MONEDA ANTES
DEL TERMINO DE CICLO
\$.25 POR 10 MINUTOS**

 D157

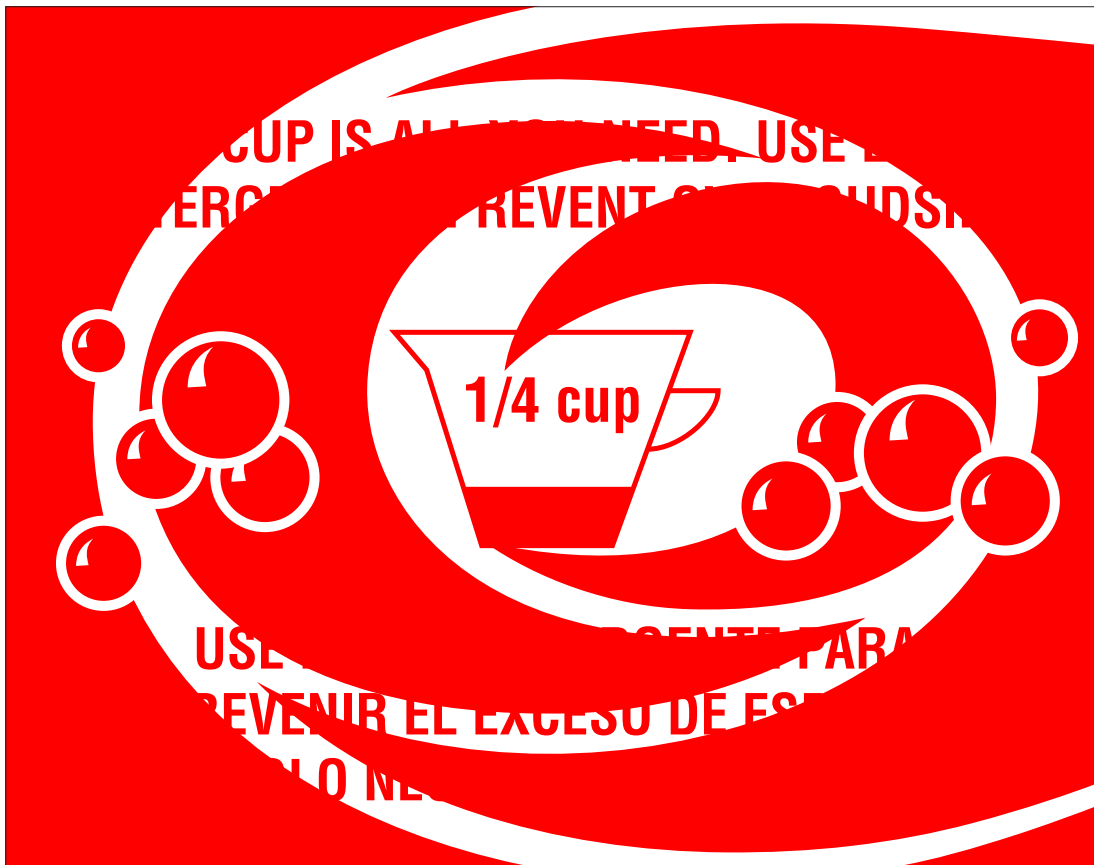

\$100
4
QUARTERS

\$150
6
QUARTERS

**WE RECOMMEND USING
LOW SUDSING DETERGENT**

\$1.00

 
75¢

50¢

LEAVE OPEN WHEN DONE

**LIQUID
DETERGENT
ONLY**

**CLEAN LINT SCREEN INSIDE
DOOR BEFORE USING**

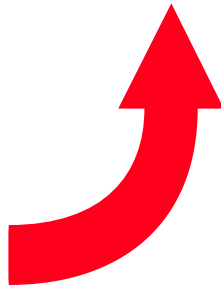**CLEAN
LINT
SCREEN** 

CAUTION

**DO NOT USE MORE
THAN 1/4 CUP OF
DETERGENT
THIS WILL PREVENT
OVER-SUDSING**

**NO CASH OR COINS
ACCEPTED HERE**

Credit and debit card
transactions only

**This Unit Has Been Upgraded
To Deter Theft and Vandalism**

1016

 
**LEAVE CARD IN SLOT
UNTIL DISPLAY READS
"REMOVE CARD"**

**DEJE LA TARJETA
INSERTADA HASTA QUE
EL INDICADOR LEA
"REMOVE CARD"**

D125ES

1/4 cup is all you need.
Use less detergent to
prevent oversudsing.

Todo lo que necesita
es 1/4 de taza.
Use menos detergente para
prevenir el exceso de espuma.

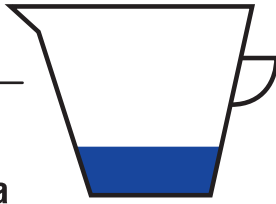

The door is designed to
automatically lock and remain
locked during the cycle.

Esta puerta es diseñada
para que cierre con seguro
automáticamente durante uso.

**DURING ORIGINAL
DRY CYCLE YOU CAN
DEPOSIT AN ADDITIONAL
.25¢ FOR 15 MINUTES.**

**DURANTE EL CICLO
ORIGINAL DE SECADO
PUEDE DEPOSITAR
.25¢ ADICIONALES
POR 15 MINUTOS**

PLEASE NOTE!

IN CASE OF EMERGENCY, UNPLUG CORD TO MACHINE FIRST, WAIT 3 MINUTES AND THEN OPEN DOOR TO MACHINE. FORCING DOOR OPEN WILL RESULT IN DESTRUCTION OF DOOR AND LOSS OF USE.

¡ATENCIÓN!

EN CASO DE EMERGENCIA, PRIMERO DESCONECTE EL CABLE DE LA MÁQUINA, ESPERE 3 MINUTOS Y ENTONCES ABRA LA PUERTA DE LA MÁQUINA. FORZAR LA PUERTA A QUE ABRA RESULTARÁ EN LA DESTRUCCIÓN DE LA PUERTA Y PÉRDIDA DE SU USO.

SELECTION	WASH TEMP	CYCLE DESCRIPTION
WHITE	HOT	NORMAL AGITATION
COLORS	WARM	
BRIGHT COLORS	COLD	
DELICATE & KNITS	WARM	SHORT AGITATION AND LONG SOAK
WOOL	COLD	
PERMANENT PRESS	WARM	NORMAL AGITATION AND SPECIAL COOL DOWN IN FIRST RINSE
RINSE TEMPERATURES		ALL COLD WATER

 
D131

Serialized Labeling, Door Hangers, etc.


***NOTE*:** All items shown are for concept only. Items can be modified in any way you need (size, wording, appearance, etc.)




Serialized Labeling w/ Barcode

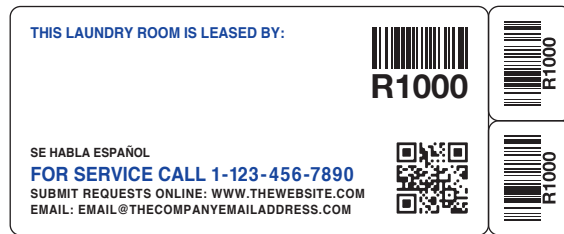

Serialized Labeling w/ QR Code

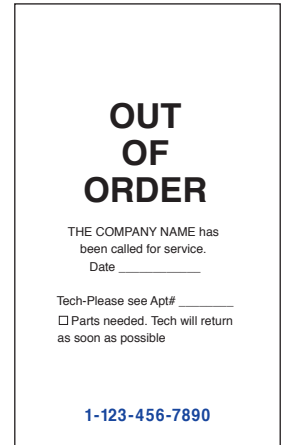 

Post-It Note

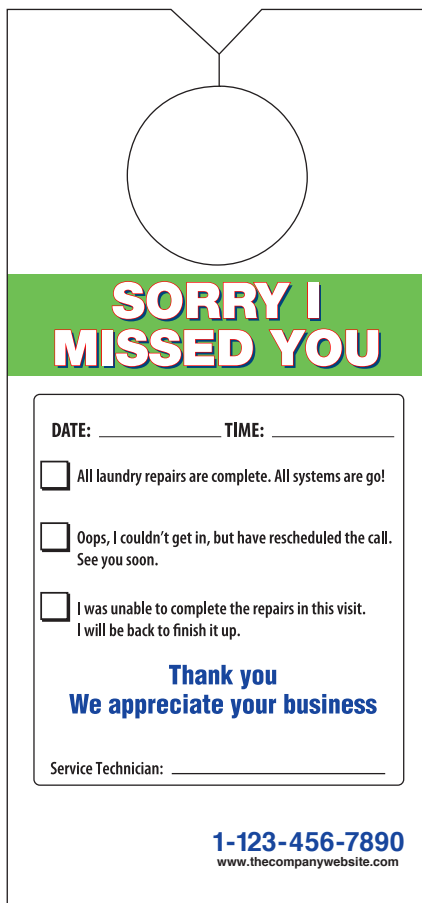 

Front



Back

Laundry Room Signs

***NOTE*:** All items shown are for concept only. Items can be modified in any way you need (size, wording, appearance, etc.)




Instructions:

- 1  Insert and remove card quickly
- 2  Start Machine
- 3  Select Washer or Dryer
- 4  Select Machine Number and press "OK"
- 5  Add another machine or press "OK" to start the machine(s)

SECURE PAYMENT



Your credit/debit card transaction is secure. All personal information is encrypted and will not be saved.





Change Point® accepts credit cards and signature debit cards.

Questions? Call 123-456-7890

STAIN REMOVAL GUIDE

COFFEE OR FRUIT JUICE
Sponge with or soak in cold water. Spray with a stain remover or apply a small amount of detergent directly to the stain. Wash as directed.

DEODORANT OR ANTIPERSPIRANT
Spray with a stain remover or apply a small amount of detergent directly to the stain. Wash in hottest water safe for the fabric. If fabric is discolored, treat new stains with ammonia and old stains with vinegar then rinse thoroughly and re-wash.

COSMETICS
Spray with a stain remover or apply a small amount of detergent directly to the stain. Wash in hottest water safe for the fabric.

BLOOD
Soak in cold water. Apply a small amount of detergent directly to the stain. Wash in hottest water safe for the fabric.

CATSUP/KETCHUP
Scrape off excess. Soak in cold water and spray with a stain remover or apply a small amount of detergent directly to the stain. Wash in hottest water safe for the fabric.


GUM
Rub stained area with ice. Remove excess gum carefully. Spray with a stain remover or apply a small amount of detergent directly to the stain. Wash in hottest water safe for the fabric.

INK
Sponge stain with rubbing alcohol, or spray with stain remover or hair spray until wet looking. Rinse thoroughly and wash as directed.


NAIL POLISH
Place stain face down on paper towels. Sponge with nail polish remover until stain disappears. Rinse thoroughly and wash in hottest water safe for the fabric.

GRASS
Spray with a stain remover or apply a small amount of detergent directly to the stain and wash as directed. If stain remains, re-apply stain remover, soak in warm water, rinse thoroughly and re-wash.

URINE OR VOMIT
Scrape to remove solids. Soak in warm water. Spray with a stain remover or apply a small amount of detergent directly to the stain. Wash as directed, using bleach if needed.



For more stain removal tips, visit the Institute of Fabric Science Web site at: instituteoffabricscience.org

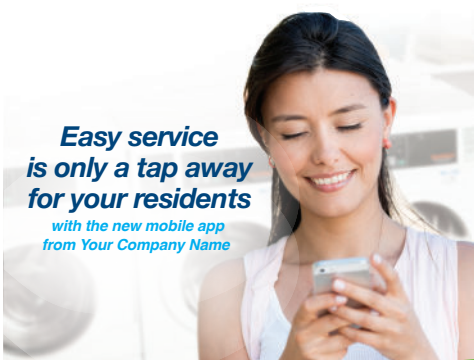


Easy service is only a tap away for your residents
with the new mobile app from Your Company Name

Amazing benefits

- Faster repair and service
- Reduced downtime
- Back to your day faster

Reporting a service request just became easier
Visit your app store and download the The Company Service Request App today!



123-APP

Machine License Plate

Available for iPhone and Android

companywebsite.com
123-456-7890

The Company Name Service Request App


Reporting a service request just became easier

Go to your app store and download the The Company Name Service Request App today!

3 simple steps to request service to our laundry machines

- 1 Download the app through Apple or Android App Store companywebsite.com
- 2 Scan the Barcode or Enter in the Machine ID 123-456-7890
- 3 Submit your service request

Download Here



Please use this machine ID when reporting service:

123-APP

For Service: Para Servicio: 1-123-456-7890

Visit our website: WWW.THECOMPANYNAME.COM

This machine is owned by Your Company Name and operated by virtue of written assignable lease executed by the owner or management of these premises.

Machine License Plate

1002

***NOTE*:** All items shown are for concept only. Items can be modified in any way you need (size, wording, appearance, etc.)

Simple Drying

SINGLE-LOAD/STACK DRYERS

- CLEAN** the lint filter
LIMPIE el filtro de pelusa
- LOAD** clothes loosely and close door securely
CARGUE la ropa suelta y cierre bien la puerta
- INSERT** card or coin
INTRODUZCA la tarjeta o moneda
- SELECT** desired cycle and start machine
SELECCIONE el ciclo de secado deseado y encienda la máquina
- START** by closing door and pushing start button
PONGA LA MÁQUINA EN MARCHA cerrando la puerta y presionando el botón de empezar

FOR YOUR SAFETY PLEASE AVOID THE FOLLOWING PARA SU SEGURIDAD, POR FAVOR EVITE LO SIGUIENTE

- LAUNDRING ITEMS CONTAINING COOKING OIL, FOAM RUBBER, GASOLINE OR ANY OTHER FLAMMABLE MATERIALS OR FLAMES.
- REACHING INTO THE DRYER WHILE IT IS OPERATING.
- ALLOWING CHILDREN TO PLAY ON OR AROUND THE DRYER.
- NO LAVE PRENDAS QUE TENGAN ACEITE DE COCINA, GOMA ESPUMA, GASOLINA, GASES O CUALQUIER OTRO MATERIAL INFLAMMABLE.
- NO INTRODUZCA LAS MANOS EN LA SECADORA MIENTRAS ESTÁ EN FUNCIONAMIENTO.
- NO DEJE QUE LOS NIÑOS JUEGUEN SOBRE O CERCA DE LA SECADORA.

For service use the Service Request App visit www.thecompany.com or call 1-123-456-7890

Para solicitar servicio técnico use the Service Request App visite www.thecompany.com o llame al 1-123-456-7890

STAIN Go Away

MUSTARD
work glycerine into stain or sponge with rubbing alcohol

LIPSTICK
rub detergent into stain until outline disappears then wash with warm water

CHOCOLATE
soak in cold water or sponge with hydrogen peroxide rinse and wash

MUD
let stain dry then brush well soak in cold water sponge with rubbing alcohol

INK
apply hairspray and rub with dry cloth put rubbing alcohol on area before washing

GREASE
soak in club soda

WAX
put area between brown paper bag and press with warm iron

FRUIT
pour boiling water through stain from several feet above

GRASS
rub detergent into stain with bleach that is safe for fabric

COFFEE
pour boiling water through the stain

CATSPUP
soak in cold water rub detergent into stain and wash

RUST
cover with lemon juice and salt then place in the sun

HELPFUL HINTS

Compliments of

For service use the Service Request App visit www.thecompany.com or call 1-123-456-7890

1 Load

Yes





Clean, Dry Clothes

Overload !!!

No





Dirty, Wet Clothes

1-123-456-7890 www.thecompany.com

International Signs

***NOTE*:** All items shown are for concept only. Items can be modified in any way you need (size, wording, appearance, etc.)
We can translate your sign into any language you may need.

服务

您的满意对我们来说十分重要
机器能够妥善工作是重中之重

请按照简单的两个步骤报告服务问题

步骤1 - 记下机器ID号码



步骤2 - 通过以下方式报告服务问题：

- 使用CSC ServiceWorks服务请求——只需扫描条形码，选择问题，然后单击“提交”
- 通过下面的网站使用我们的在线服务请求
www.cscsw.com
- 拨打免费电话
1-877-264-6622

下载
CSC 服务应用



Instrucciones

PAGUE POR SU LAVADO Y SECADO AQUÍ



1 PASO 1 - Use su método preferido de pago INSERTANDO Y RETIRANDO SU TARJETA RÁPIDAMENTE - la banda hacia arriba y a la derecha.



2 PASO 2 - El lector autorizará el método de pago.

3 PASO 3 - Seleccione su ciclo de lavado. Si su máquina no empieza automáticamente, oprima START.

Residentes pueden comprobar la disponibilidad de máquinas de lavandería antes de tiempo visitando LaundryView.com

POR FAVOR REPORTE PROBLEMAS DE SERVICIO UTILIZANDO EL SIMPLE METODO A CONTINUACION.

Descargue el CSC ServiceWorks App. Disponible en el App Store o Google Play.

0 use la solicitud de servicio en línea en cscsw.com o llame al número gratis 1 877 264 6622.

PASO 1 - Primero, tome nota del número de la máquina.



PASO 2 - Reporte el problema de servicio a través de:
CSC ServiceWorks Service Request app - escanee el código de barra de la máquina (plate #) o escriba el número de identificación o
CSC website - Envíe la solicitud usando el número de identificación (ID #) del Paso 1.

VISA MasterCard DISCOVER

Charge Pass™ acepta tarjetas de crédito y tarjetas de débito de firma.

الجوال LaundryView®

يضع غرفة الغسيل بين يديك!

قم بمسح ضوئي لشفرة QR للاتصال بغرفة الغسيل هذه

<sticker>

ما عليك إلا النقر فوق "خيارات" (Options) وإدخال رقم هاتفك لتتلقى تنبيهاً نصياً عند انتهاء دورة غسيلك.

عرض رؤية ثلاثية الأبعاد راجع حالة الغسالة في غرفة الغسيل وحدد تنبيهاتك باستخدام عنوان URI المذكور أعلاه

LaundryView®
نظام المراقبة



简单干燥

单缸/堆叠式烘干机

1 清洁棉绒过滤器

2 轻松放入衣服并牢固关闭机门

3 选择所需的循环并启动机器

4 插入卡或硬币

5 通过关闭机门并按下启动按钮启动

为了您的安全，请避免以下情况：

- 干燥含有烹饪油、泡沫橡胶、汽油或任何其他易燃材料或易燃物品。
- 在机器运行时把手伸入烘干机。
- 让孩子在烘干机上或周围玩耍。

欲获得服务
使用请程 服务请求应用程序
请访问 cscsw.com 或致电 1-123-456-7890

 
 
 
下载
服务应用





Lexan Machine Overlays

NOTE: All items shown are for concept only. Items can be modified in any way you need (size, wording, appearance, etc.)

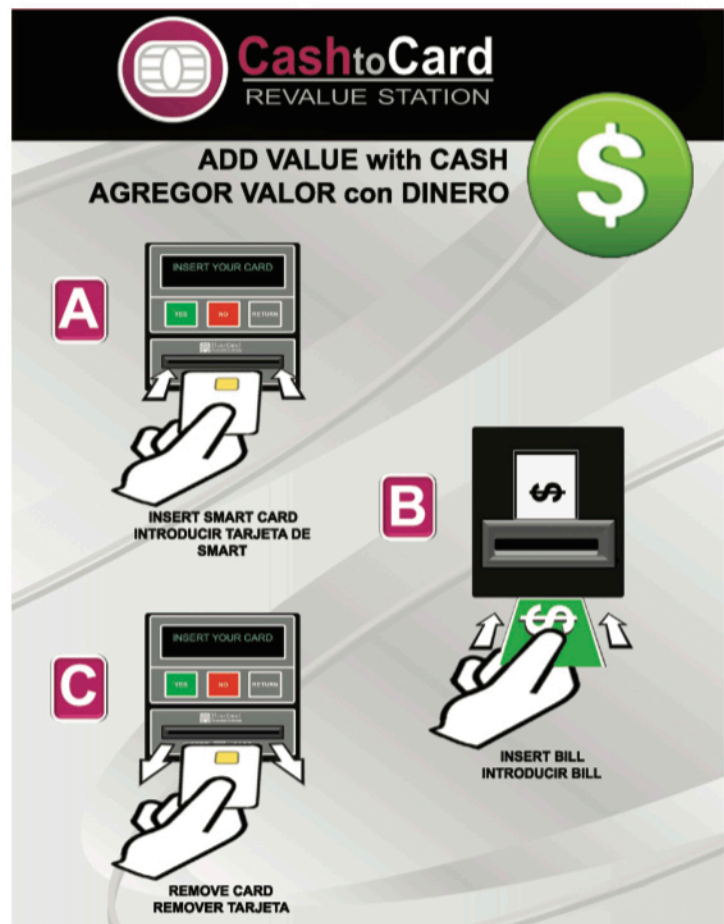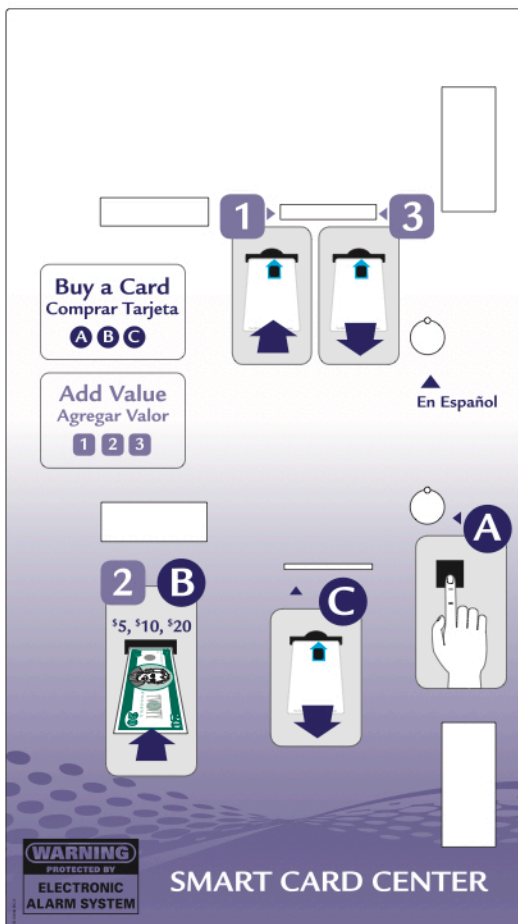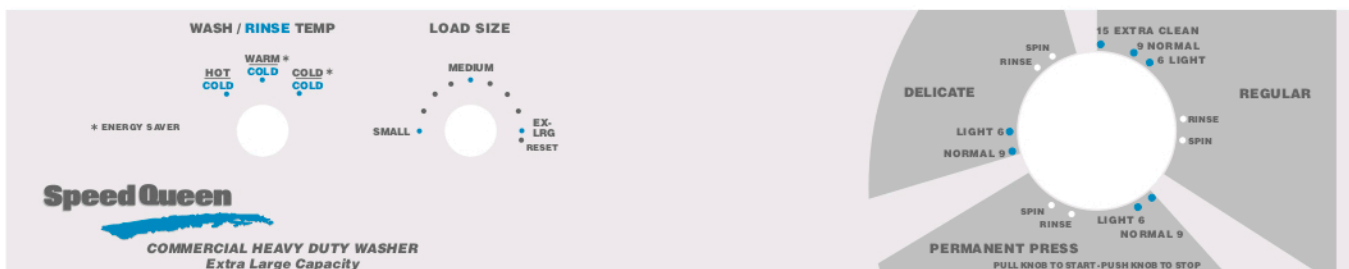

***NOTE*:** All items shown are for concept only. Items can be modified in any way you need (size, wording, appearance, etc.)

